


Quick Installation Guide




Note: Please scan the QR code and read the Myrtillo user manual carefully before installation.


A Module introduction

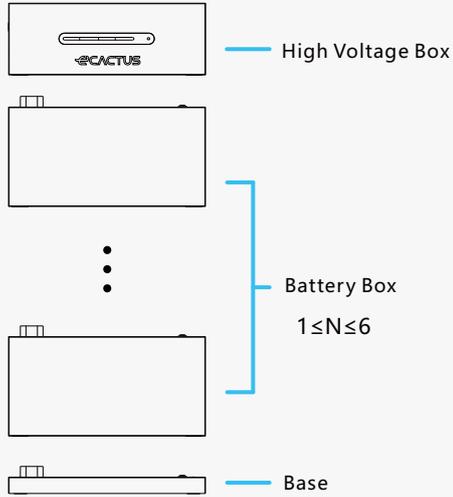


B Installation Space Requirements

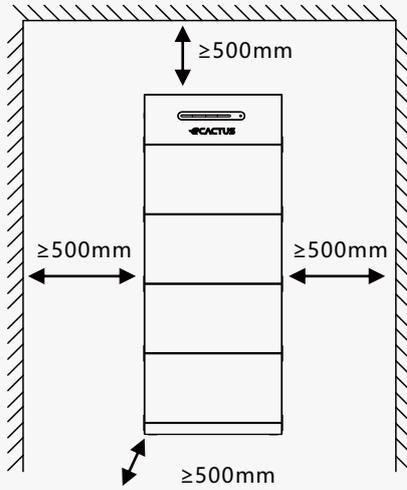


STEP 1

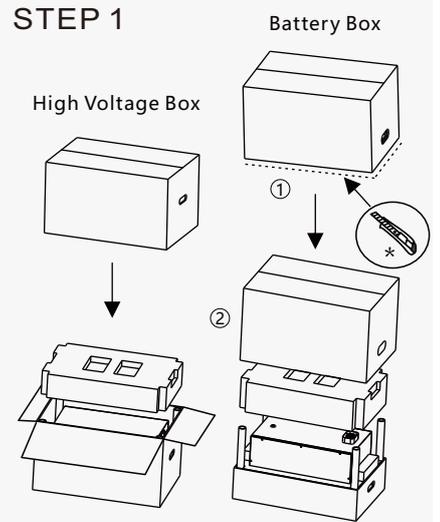


STEP 2

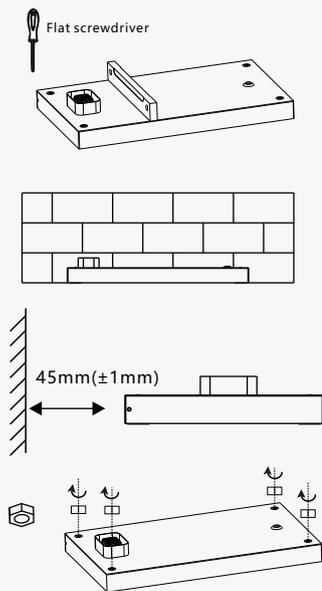


STEP 3

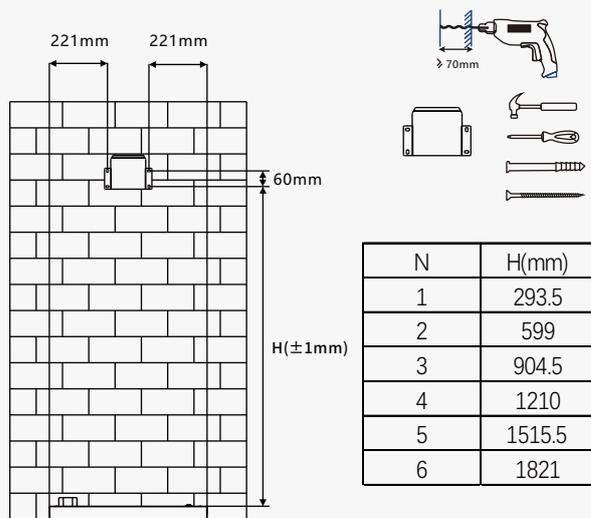

STEP 4

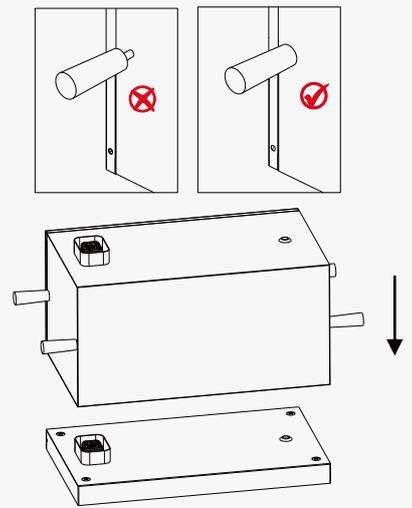


STEP 5

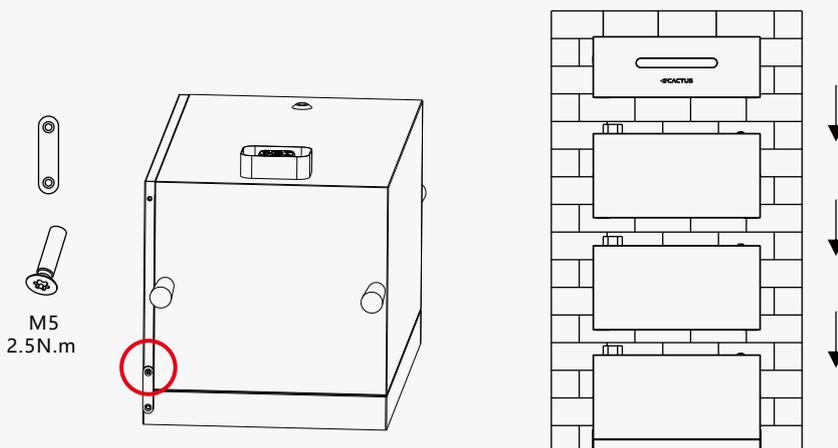

*Please secure the connecting plates at each battery box before stacking them and use lifting equipment when installing the sixth battery box.

STEP 6

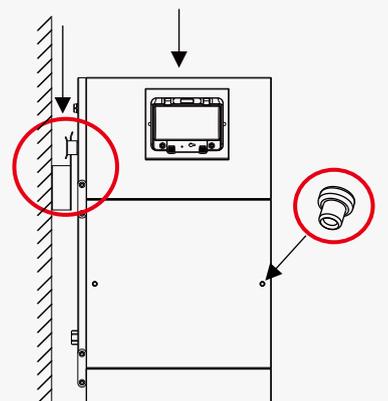


Quick Installation Guide




Note: Please scan the QR code and read the Myrtillo user manual carefully before installation.


STEP 7

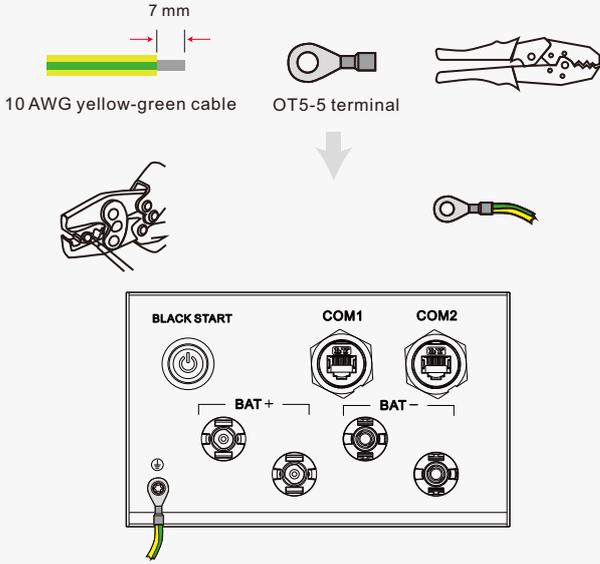

STEP 8

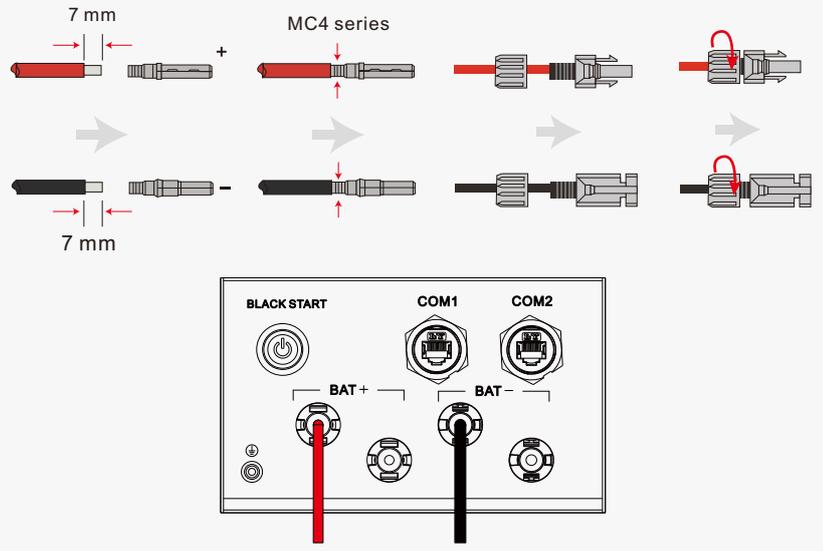

STEP 9

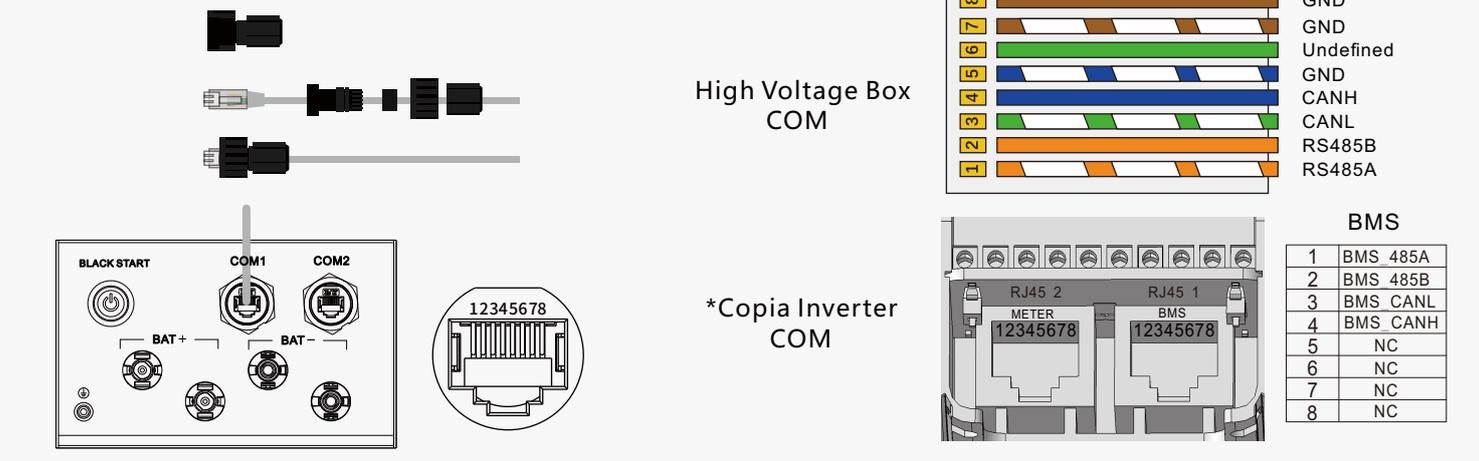

*For third-party inverters, please refer to the COM port definition in the user manual for wiring.

STEP 10

