

Quick Installation Guide


V1.1




Note: Please scan the QR code and read the Agave user manual carefully before installation.

A Installation Space Requirements



(1) 500 mm around the BESS
(2) 800 mm around the BESS
(3) 500 mm around the BESS

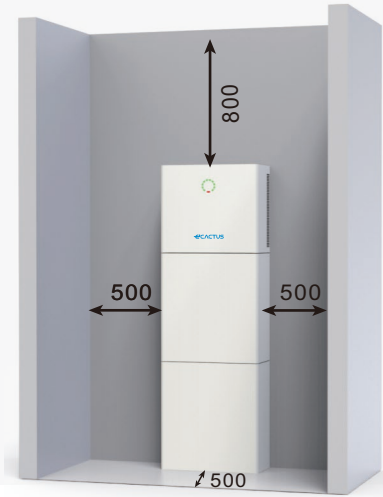



STEP 1

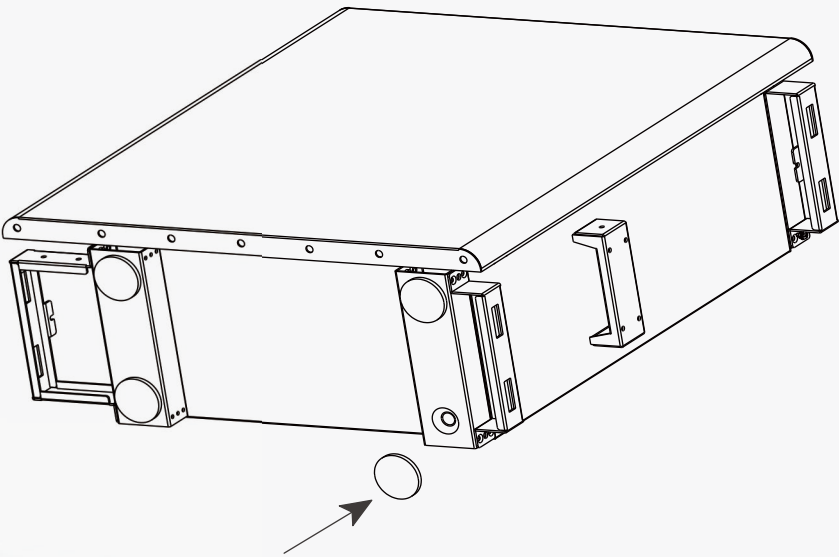



STEP 2

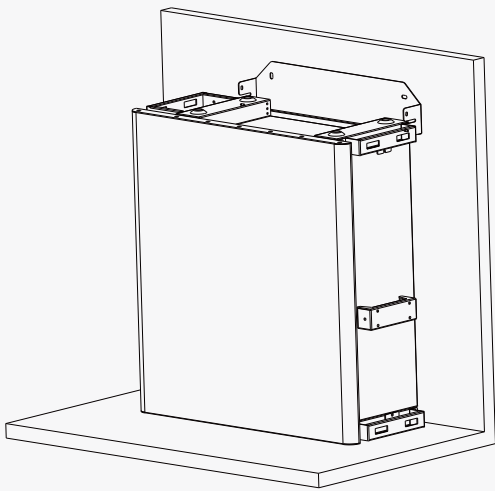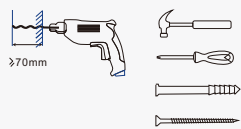



STEP 3

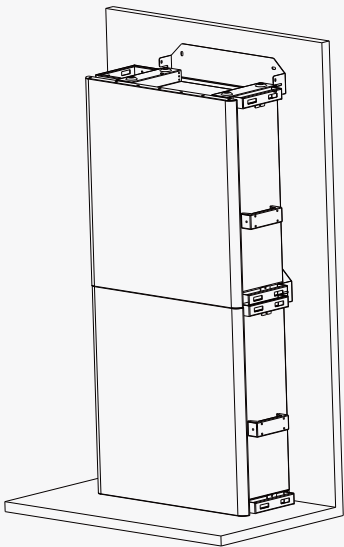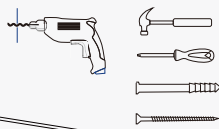




STEP 4

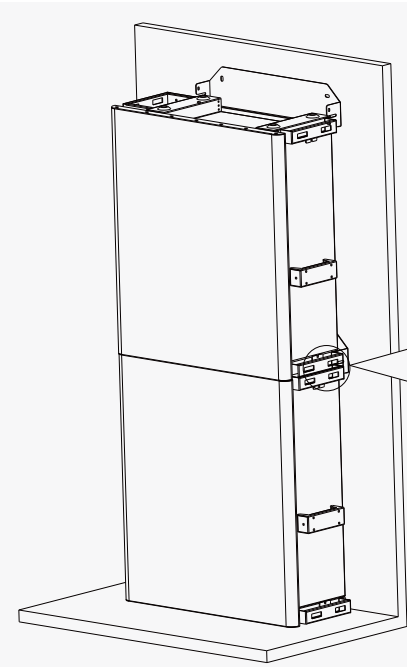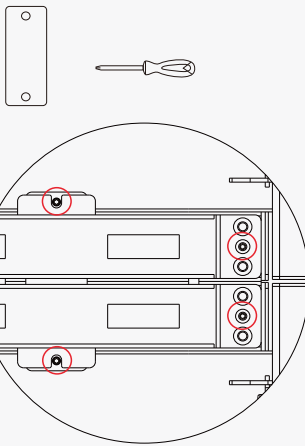





STEP 5

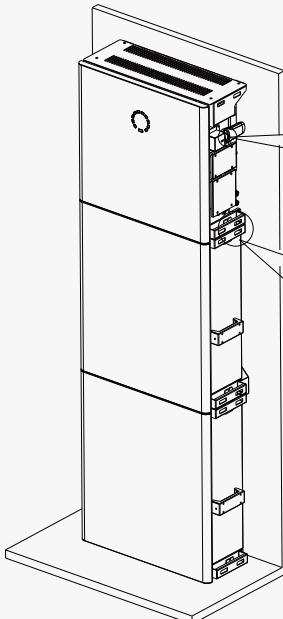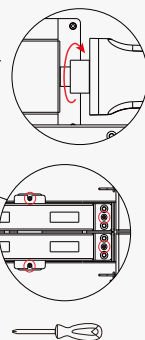

STEP 6

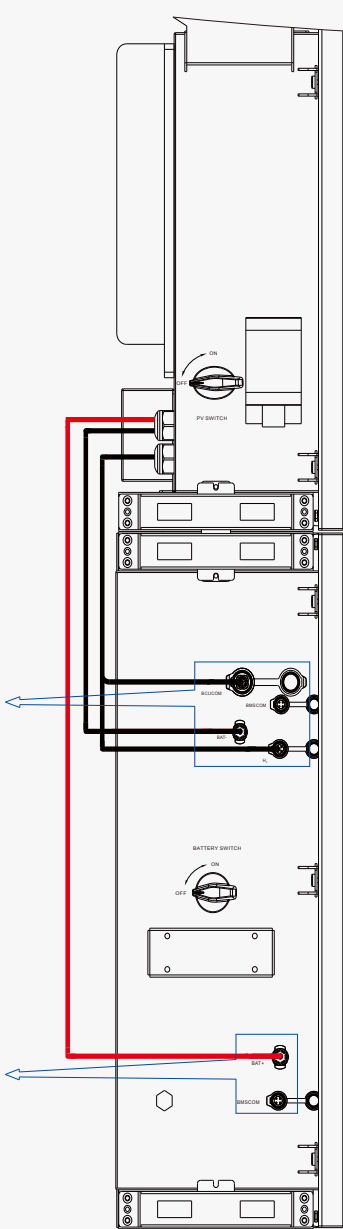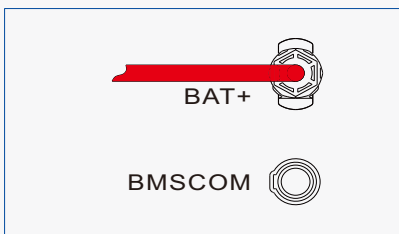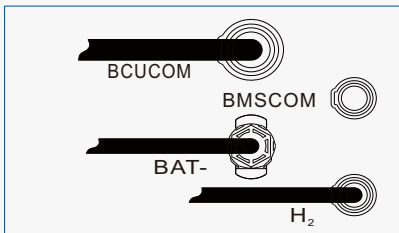


5kWh

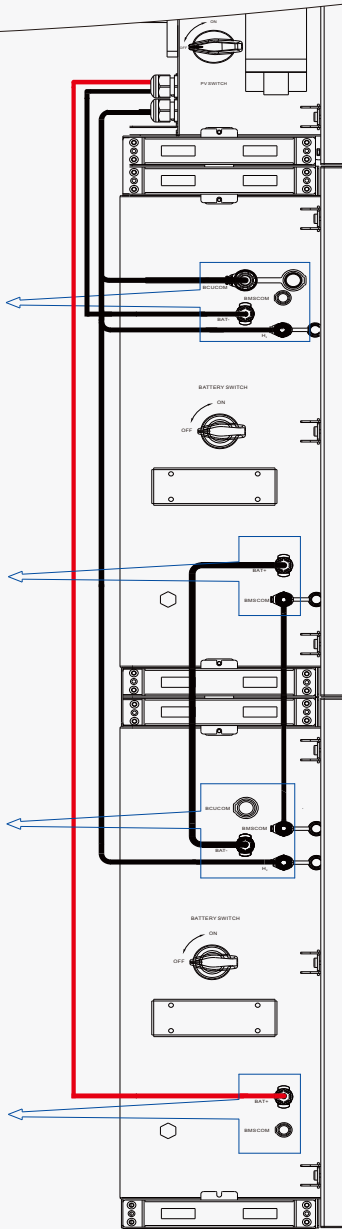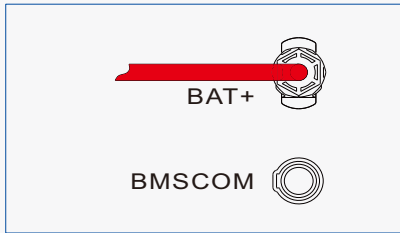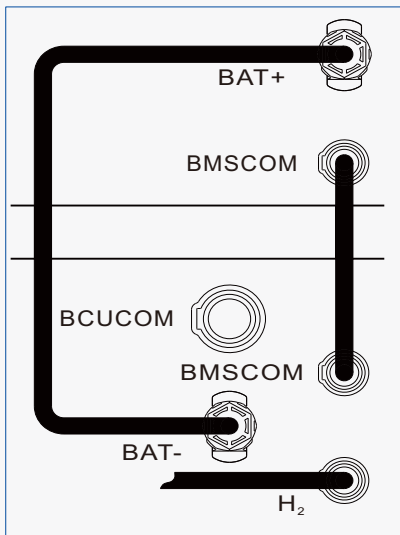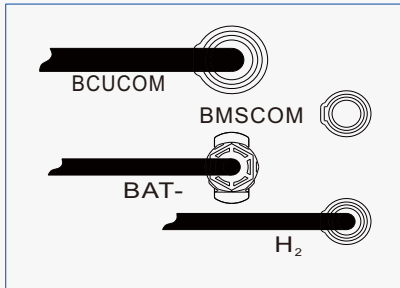


10kWh



STEP 7

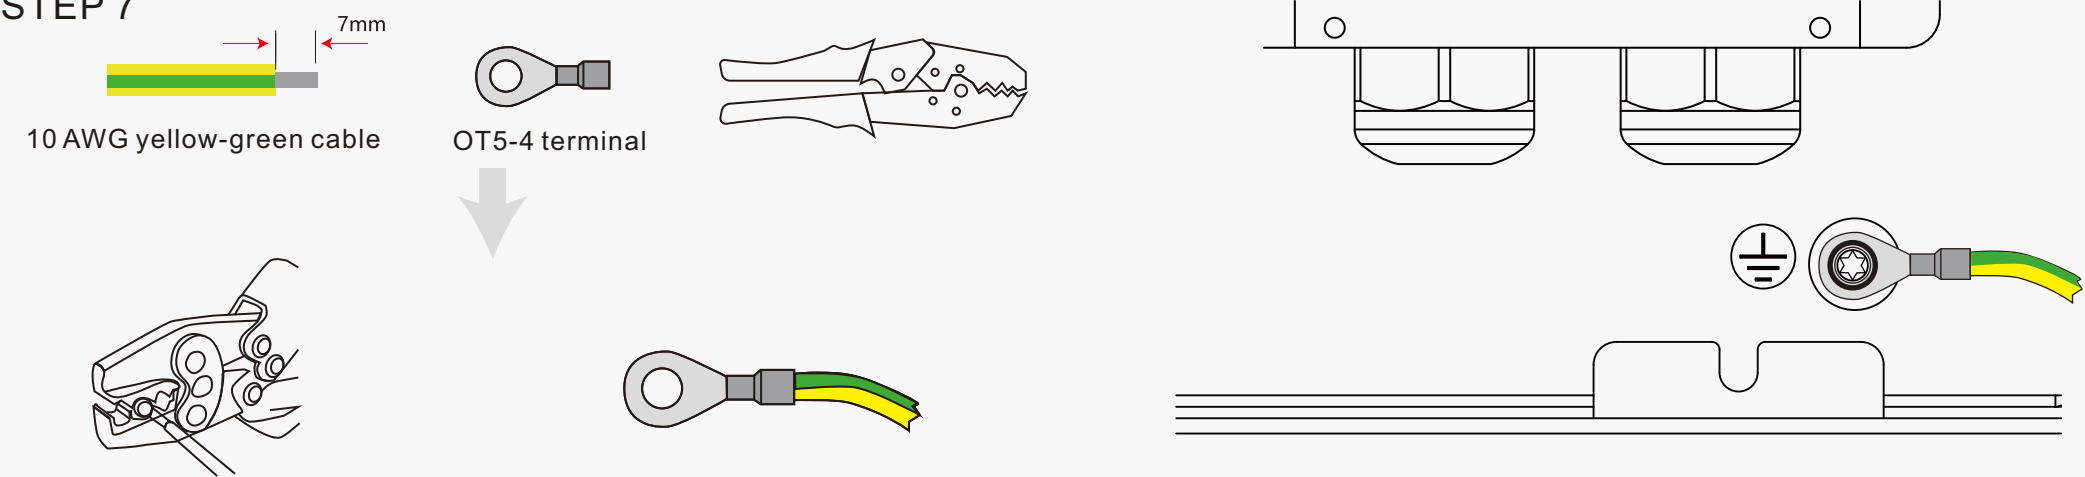

STEP 8

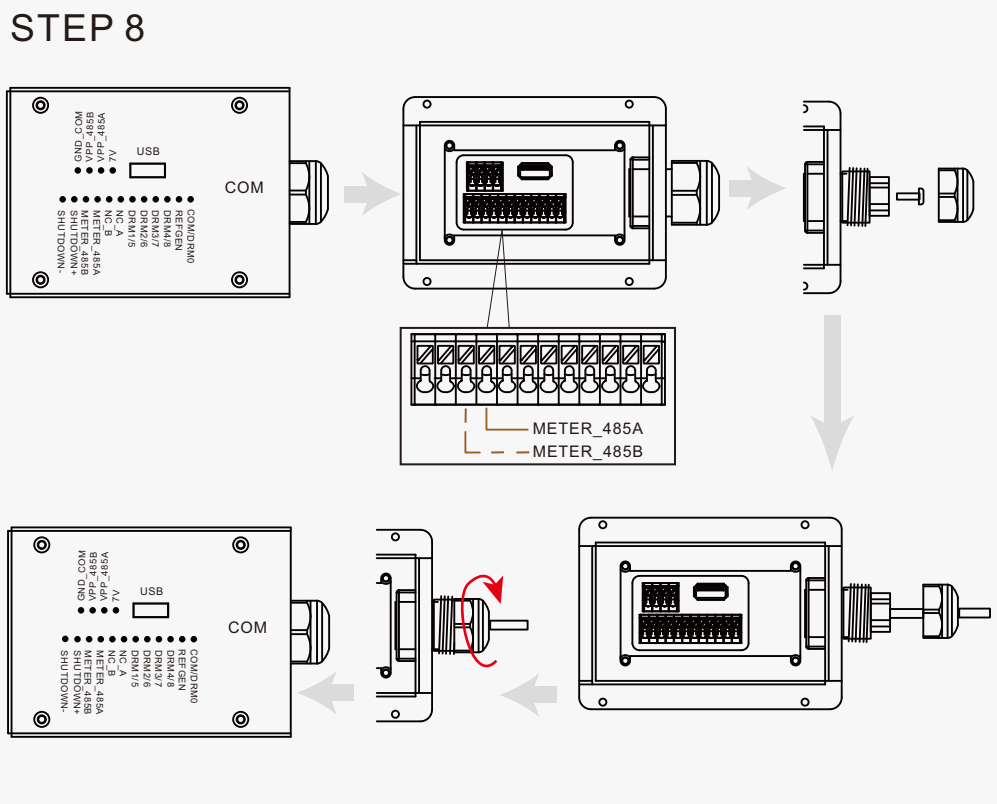

STEP 9

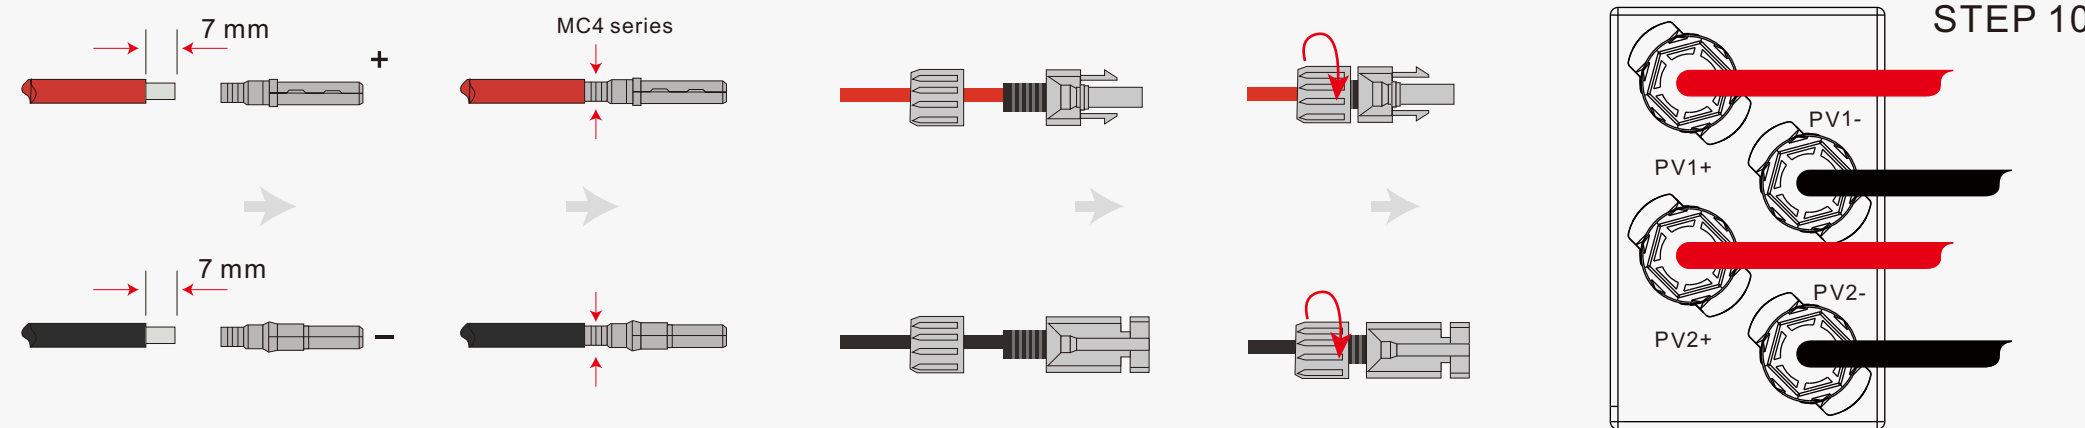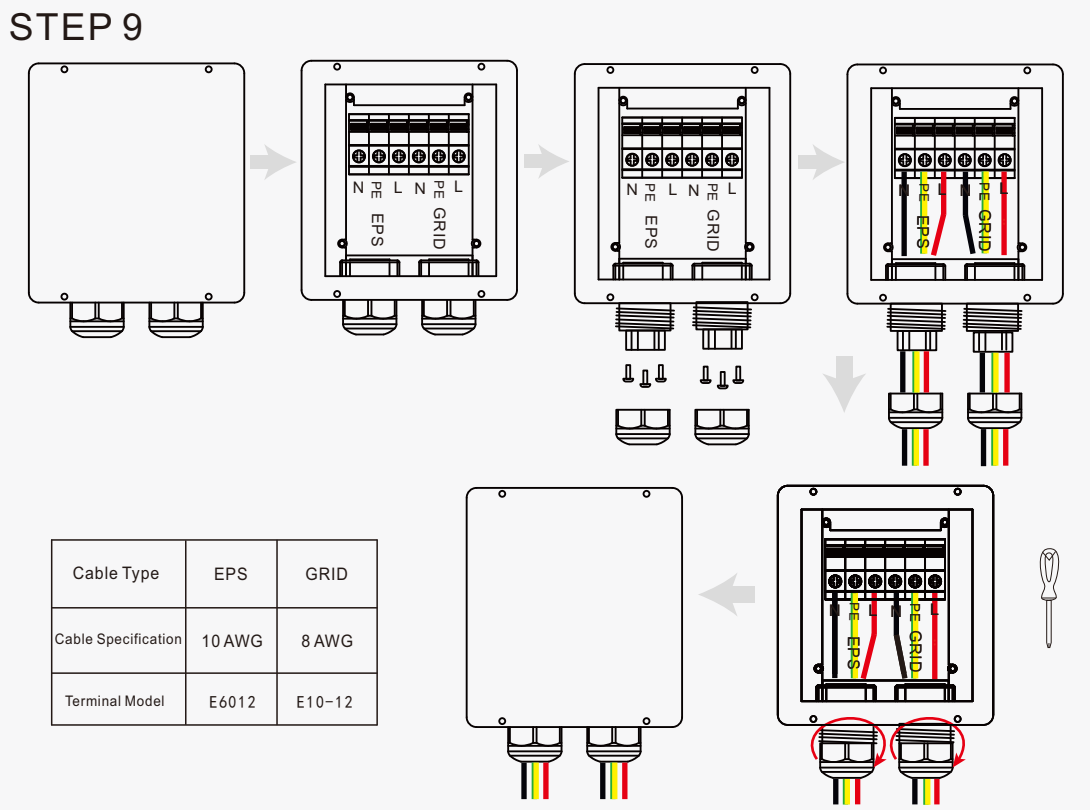

Quick Installation Guide

V1.1




Note: Please scan the QR code and read the Agave user manual carefully before installation.


STEP11

Please use an appropriate breaker based on the following specifications:

Single Phase Meter

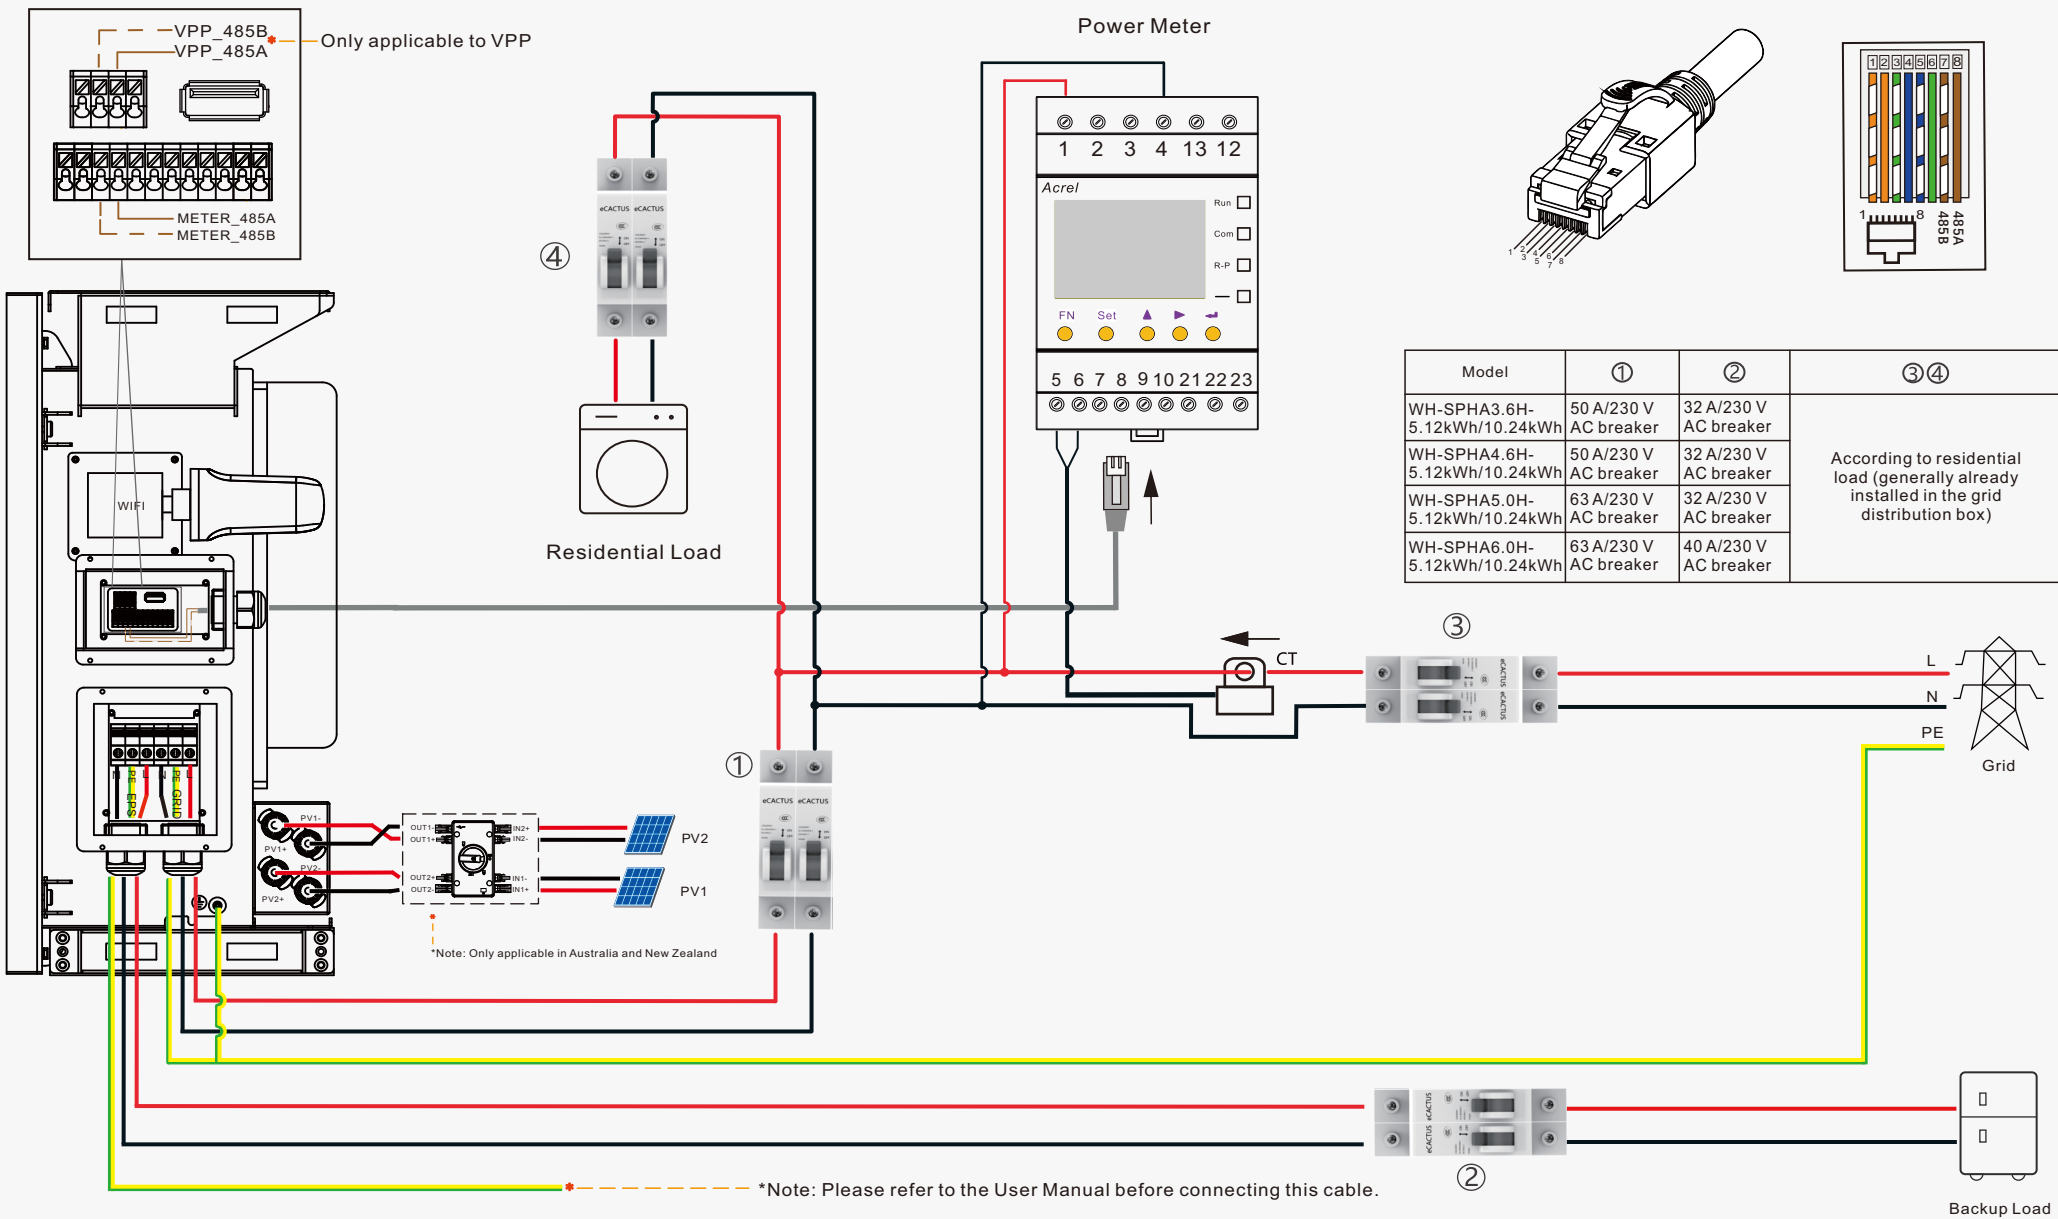

Three Phase Meter

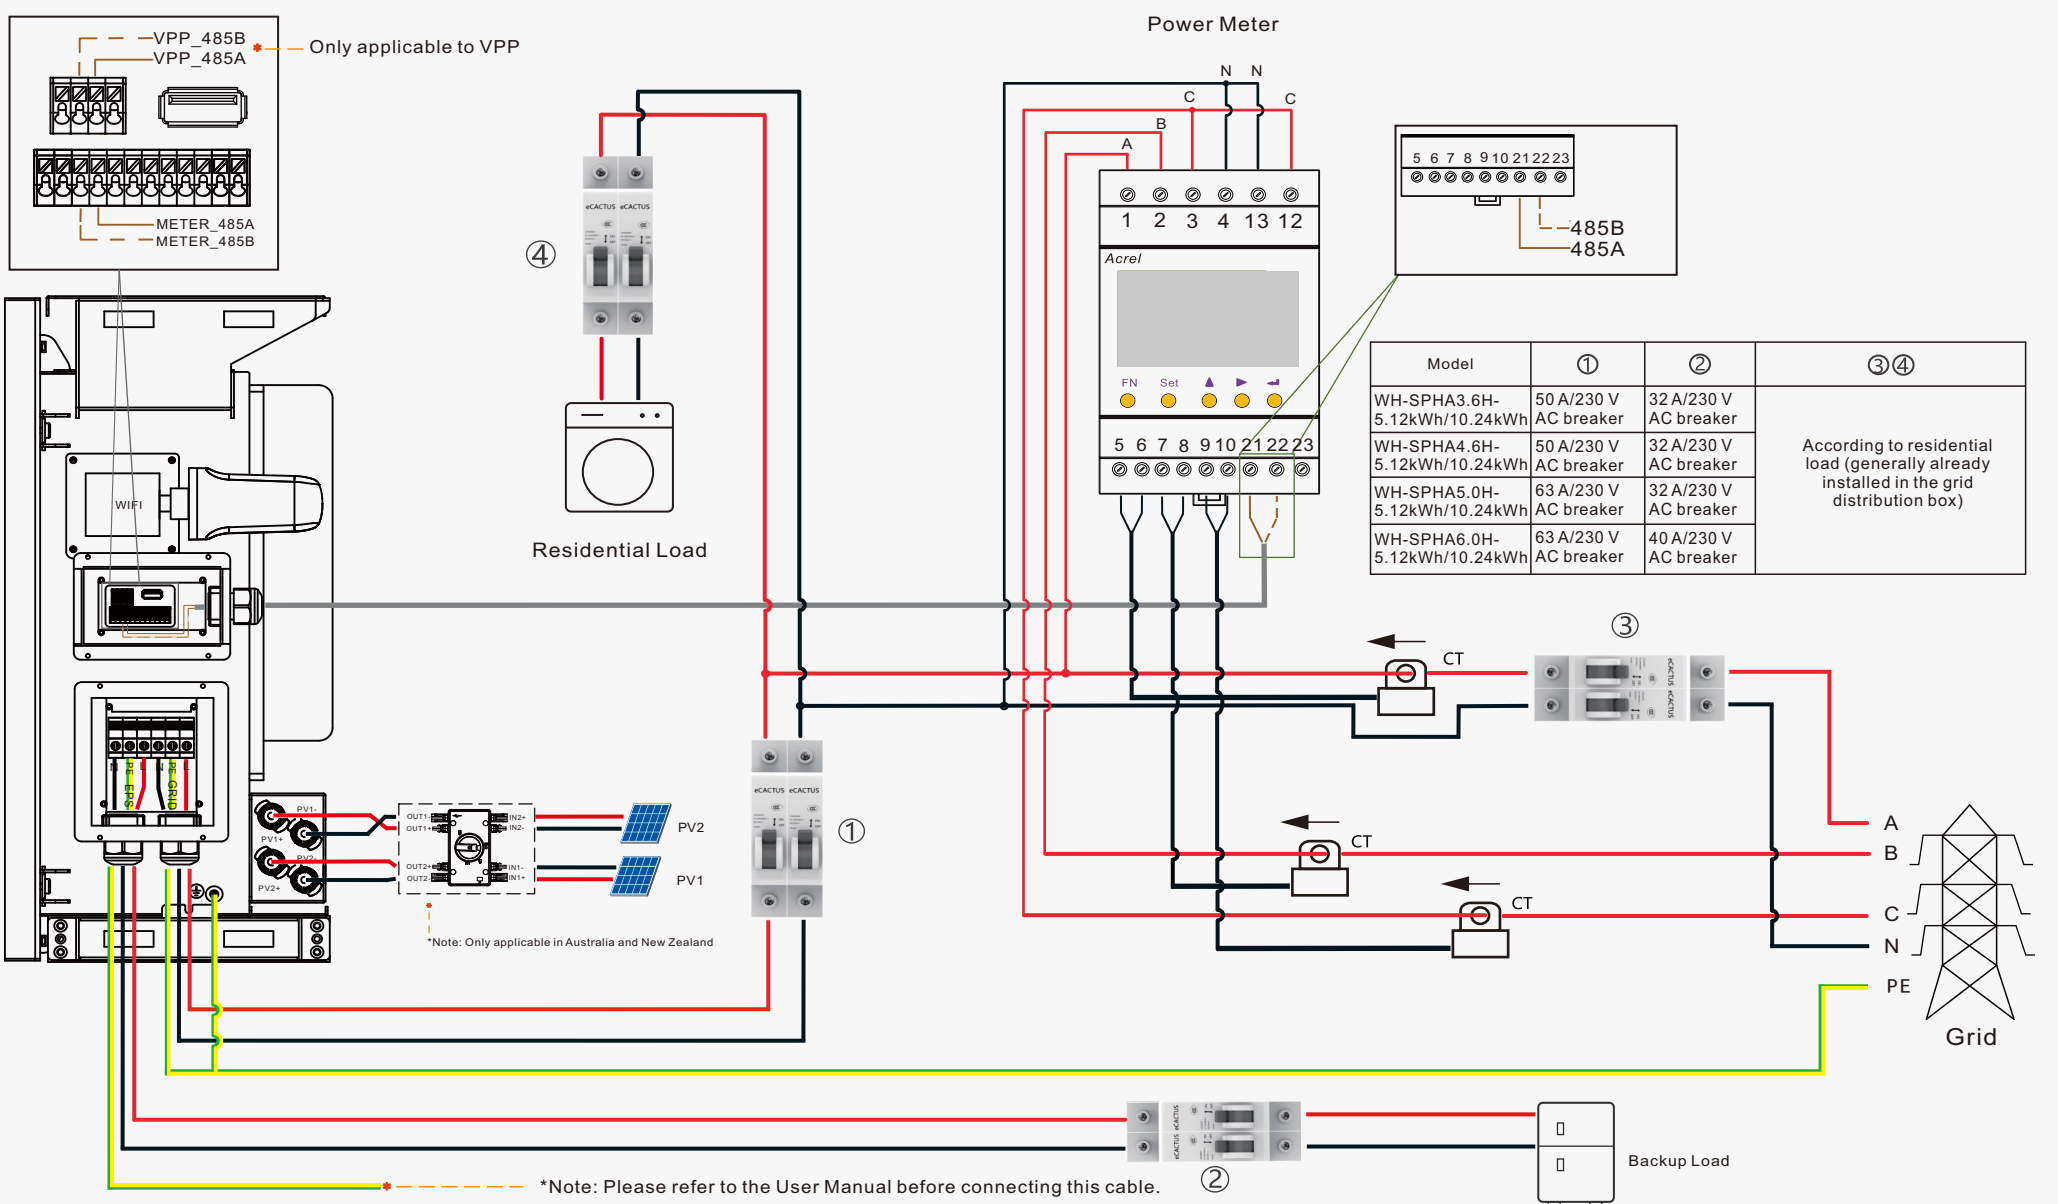


STEP12

App Pairing


- 1. BESS must be connected to PV power only.
- 2. A router connected to the Internet is required to connect to the ECOS application center.
- 3. Android or iOS smartphone.

Notice

Scan the QR code below to download the Android or iOS version of the ECOS app.

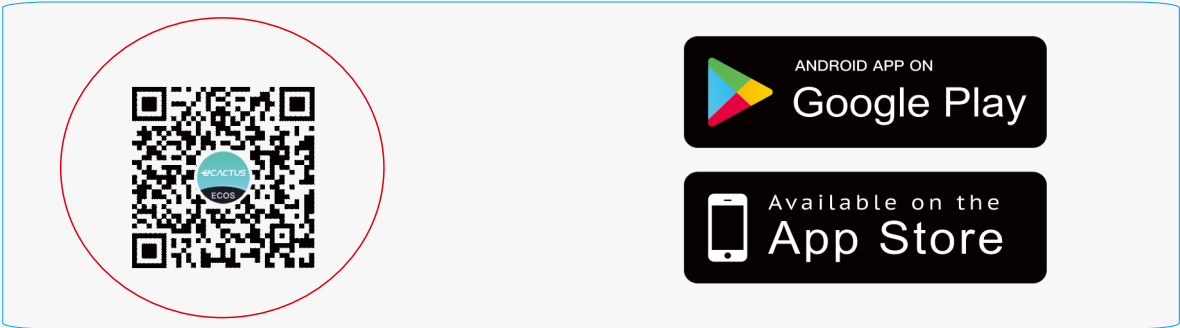

The product ID QR code required for connection can be found on the included Wi-Fi dongle installed on the right side of the device.

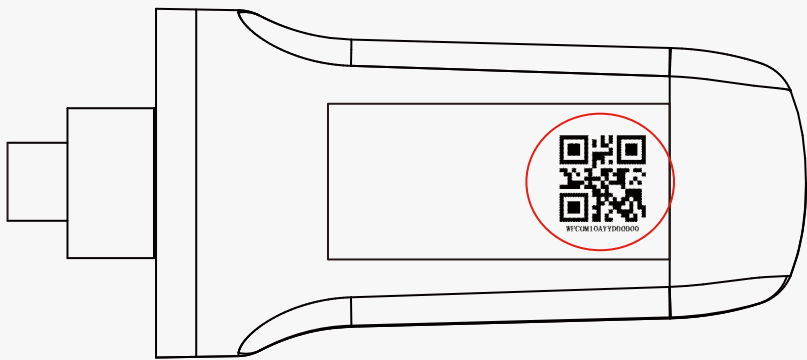

For network configuration instruction, please scan the QR code.

